

BaByliss[®]

MULTI STYLE
2800DU

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY



- Do not use the appliance in the bathroom.
- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use, do not place the appliance on any heat sensitive surface.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to

understand the safe use and hazards involved and are adequately supervised.

- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See “U.K. After Sales Service” section for further information.)

INSTRUCTIONS FOR USE

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling.
- Fit the required attachment as described below, ensuring that the attachment is locked into position.
- To remove the attachments ensure the appliance is cool and unplugged. On the power handle there are two slide switches on the top and lower housing. Slide back the switches individually and pull to release the separate attachments.
- Follow the instructions for each attachment as stated below.
- Plug the appliance into a suitable mains socket and slide the switch to the 'I' to turn on, the 'on' indicator light will illuminate.
- Always place on a firm surface using the safety stand on the base of the appliance. Do not place the appliance on any heat sensitive surface.
- Allow the appliance to heat up.
- After use slide the switch to 'O' to turn off and unplug the appliance.
- Allow to cool before storing away

IMPORTANT! The element of the appliance will become very hot when plugged in and switched on. Before fixing or removing any attachments, ensure the appliance is cool, switched off and is unplugged.

13MM/16MM/19MM TONG ATTACHMENTS

To create, tight or loose curls:

- Use the 13mm tong to create tighter curls
- Use the 16mm tong to create defined curls
- Use the 19mm tong to create loose curls

Fitting The Tong Attachments

- Insert the correct size tong in the bottom slot of the power handle. On the bottom of the attachment there is a small ridge, ensure this is facing downwards and then push the attachment into the handle until it clicks into place.
- Hold the handle in the closed position and insert the spring lever in the top slot of the appliance. On the top of the spring lever attachment

there is a small ridge, ensure this is facing upwards and then begin to push the attachment into the handle, whilst still holding the handle in the closed position you will need to line up the grooves on the attachment so that they connect with the tong attachment and it clicks into place.

NOTE: When using the 19mm tong only insert it as one attachment, as the spring lever is already attached to the tong.

Instructions Of Use - 13mm, 16mm And 19mm Tong Attachments

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Pressing the lever, place the appliance midway up a section of hair and spread hair evenly between the lever and barrel.
- Once hair is in place carefully let go of the lever so the hair is held securely between lever and barrel. Gently slide the appliance down to the hair ends.
- Wind the hair around the barrel at a slight angle, so the hair wraps around the barrel in a spiral motion. As you wind the hair around the barrel, ensure the hair is distributed evenly so the entire section is touching the barrel, try not to overlay the hair.
- Hold in place for 5-10 seconds depending on the texture and length of your hair.
- To remove the appliance from the hair, press the lever and pull appliance away.
- Allow the curl to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

DUAL BARREL TONG ATTACHMENT

To create waves and styles with movement:

- Use both the 13mm and 16mm tongs

Fitting The Dual Barrel Tong Attachment

- Insert the 13mm size tong in the bottom slot of the appliance. On the bottom of the attachment there is a small ridge, ensure this is facing downwards and then push the attachment into the handle until it clicks into place.
- Hold the handle in the closed position and insert the 16mm size tong in the top slot of the appliance. On the top of the 16mm size tong attachment there is a small ridge, ensure this is facing upwards and then begin to push the attachment into the handle, whilst still holding the handle in the closed position you will need to line up the grooves on the attachments so that they connect with each other and click into place.

Instructions For Use - Dual Barrel Tong

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Take a small section of hair and wind the hair around both barrels. Take care to avoid the hot surface of the barrels.
- Hold in place for 5-10 seconds, depending on the length and texture of the hair.
- Release the end of the hair and slowly pull the tong from the hair. Allow the curl to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

SPIRAL SLEEVE ATTACHMENT

To create ringlets and tousled curls:

- Use the 19mm tong with the spiral sleeve

NOTE: The spiral sleeve can only be used with the 19mm tong attachment.

Fitting The Spiral Sleeve Attachment

- Ensure the 19mm tong is inserted into the appliance (Please see the 'Fitting The Tong Attachments' section for direction) and is completely cool. Push the spiral sleeve over the tong and the long lever. Once the sleeve has reached the small lever press the spoon button and continue to push the sleeve to the end of the barrel to attach.

Instructions For Use - Spiral Sleeve

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Pressing the lever, place the end of the hair section under the small lever. Once hair is in place carefully let go of the lever so the hair is held securely between lever and barrel. To avoid crimped ends, ensure the ends are securely wound under the lever in the direction of the desired curl.
- Twist the appliance upwards, winding the hair around the tong, keeping the hair within the spiral guides. Wind the hair upwards, taking care to avoid the hot surface of the barrel touching the scalp.
- Hold in place for 5-10 seconds depending on the texture and length of your hair.
- To remove the appliance from the hair twist the appliance downwards, unwinding the hair from around the barrel and press the lever and pull appliance away.
- Allow the curl to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

BRUSH SLEEVE ATTACHMENT

To create shape, texture and volume:

- Use the 19mm tong with brush sleeve.

NOTE: The brush sleeve can only be used with the 19mm tong attachment.

Fitting The Brush Sleeve Attachment

- Ensure the 19mm tong is inserted into the appliance (Please see the 'Fitting The Tong Attachments' section for direction) and is completely cool. Push the brush sleeve over the tong and the long lever until it reaches the end of the barrel to attach.

Instructions For Use - Brush Sleeve

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Place the brush at the roots and slide downwards towards the ends of the hair.
- To add shape, roll a section of hair around the brush and hold for 5-10 seconds. On longer styles, be careful not to overlay the hair around the barrel as this may cause tangling.
- Allow the section of hair to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

STRAIGHTENER/CRIMPER ATTACHMENT

To create sleek or crimped styles:

- Use the straightener/crimped plates

NOTE: This appliance has one set of heated styling plates, which are reversible for crimping or straightening. Once the plate attachments are fitted it is simple and easy to change between using the straightening plates and crimping plates without having to remove the attachments themselves.

Fitting The Straightener/Crimper Attachment

Insert both styling plate attachments into the two slots in the power handle, to do this make sure the ridge is lined up so the attachments can be clicked into place.

Changing The Plates

To change between the plates, close the power handle together and simply push down the convertible button that is on the side of the styling plate attachment.

Instruction For Use - Straightener Plates

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Place the section of hair between the plates, close to the roots.
- Hold the hair firmly between the plates and slide slowly down the length of the hair, from root to tip.
- Allow the hair to cool before combing through.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

Instruction For Use - Crimping Plates

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Clamp a section of hair between the top and bottom plates by pressing the styler together. Hold in place for 5-10 seconds.
- Release the appliance from the hair and re-position the plates so that the next crimp falls in line with the first or do random sections depending on your style.
- Always work from the roots towards the end of the hair.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

For more information on this appliance visit www.babyliss.co.uk

UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet,
GU51 3TW

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com

Return address:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

