

# *BaByliss*<sup>®</sup>

## STRAIGHT AND CURL BRILLIANCE 2480U

### **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

### **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

### **WARNING! THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY**



- Do not use the appliance in the bathroom.
- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use, do not place the appliance on any heat sensitive surface whilst in operation even when using the heat wrap provided.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- In the event the appliance is left switched on, it will automatically shut off after 72 minutes. If you wish to

continue using the appliance after this time, simply press the  $\phi$  button to turn the power on.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See “U.K. After Sales Service” section for further information.)

## **INSTRUCTIONS FOR USE**

### **Straightening**

- Ensure hair is dry and combed through.
- Divide the hair into sections.
- Plug in the appliance and press the button marked ' $\phi$ ' to switch on.
- To select a heat setting suitable for your hair type, press the '+' and '-' buttons. The indicator light will blink until the heat setting selected has been reached. Once the temperature has been reached, the indicator will remain solid in colour.

- Take a section of hair and place it between the styling plates.
- Starting at the root, close the plates applying gentle pressure and glide down the section in one smooth movement.
- If you wish to create shape at the ends of the hair, slightly bend your wrist inwards as you reach the end of each section.
- Repeat as necessary through the remaining sections of hair.
- Allow the hair to cool fully before combing through.

## Creating Curls

- Ensure the cool tips are in position at the end of the appliance. (See Fig. 1).

Fig. 1



- Plug in the appliance and press the button marked '⏻' to switch on.
- To select a temperature setting suitable for your hair type, press the '+' and '-' buttons. The indicator light will blink until the heat setting selected has been reached. Once the temperature has been reached, the indicator will remain solid in colour.
- Separate a section of hair. The smaller the section the more defined the curl. The larger the section the looser the curl.
- Take the hair section and place between the plates, roughly 3 inches from the roots. (See Fig. 2).
- Holding the appliance handle in one hand and the cool tips in the other turn the appliance 180° back on itself so that the hair is wrapped once around the outside of the appliance. (See Fig. 3).

Fig. 2



Fig. 3



- Slowly glide the appliance along the length of hair from root to tip in a downward motion. (See Fig. 4).

**Fig. 4**



- Release the appliance from the hair.
- To ensure the curl sits neatly in place, hold the end of the section you have curled and twist it in the direction of the curl. (See Fig. 5).

**Fig. 5**



## **Heat Settings**

If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.

It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved.

Below is a guide of the temperature settings:

Setting 1 (Green) = 150°C

Setting 2 (Yellow) = 170°C

Setting 3 (Orange) = 190°C

Setting 4 (Red) = 210°C

Setting 5 (Red) = 235°C

## **Ionic Technology**

Turning on the appliance will automatically activate the ionic technology.

**Please note:** The release of the ions from the ports produces a slight buzzing noise.

## **Auto Shut Off**

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. To continue using the appliance after this time, simply press the button '⏻' to turn the power on.

## **Heat Wrap**

The appliance comes with a heat wrap for use during and after styling. During use do not place the appliance on any heat sensitive surface, even when using the heat wrap provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down. Continue to keep it out of reach of children as it will remain hot for several minutes.

## **CARE & MAINTENANCE**

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

For more information on this appliance visit [www.babyliss.co.uk](http://www.babyliss.co.uk)

## UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet,  
GU51 3TW

This BaByliss appliance is guaranteed for consumer use for 5 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

### Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)



## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

Return address:


Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

## **SAFE DISPOSAL**



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.





