



***BaByliss*** FOR ***men***®



TITANIUM  
NITRIDE

**Model 7471U**





# *BaByliss*<sup>FOR</sup>men<sup>®</sup>

## **TITANIUM NITRIDE**

The BaByliss for Men Titanium Nitride is a high performance hair clipper with precision engineered Titanium Nitride blades for exceptional, effortless cutting and professional results. A lithium-ion charging system produces up to 80 minutes of cordless high power from only a 3 hour charge.

## **FEATURES**

- Cordless operational clipper - use cordless for total flexibility and control.
- Lithium-ion technology for powerful cutting action and sustained power performance.
- Precision engineered Titanium Nitride cutting blades for smooth, effortless cutting.
- Lightweight for easy handling during use.
- Fine cut adjustment taper control for a high quality even finish.
- Lithium-ion charging system for 80 minutes of cordless use from a 3 hour charge.
- 30 Minutes quick charge for approximately 30 minutes of use.
- Grades 0-8 for a variety of different lengths and styles.
- Cleaning brush.
- Lubricating oil.
- Hard storage case.
- 3 year guarantee.





## **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction book. Please retain for reference.

## **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

## **IMPORTANT SAFETY**

- Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to





understand the safe use and hazards involved and are adequately supervised.

- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Services Department. (See “U.K. After Sales Service” section for further information.)
- The battery should be removed for safe disposal at the end of its life.





## INSTRUCTIONS FOR USE

### Charging the Appliance

**IMPORTANT!** Only use the adaptor supplied with this appliance. This clipper is so easy to use, but before you do anything you must take your time to charge the unit for 3 hours before its first use. Maximum battery capacity will only be reached after 3 charging/discharging cycles. A 3 hour charge will provide approximately 80 minutes use. A 30 minute quick charge will provide approximately 30 minutes use.

The red LED light will flash when charging the appliance, and the red light will stop flashing but remain on when fully charged.

**NOTE:** Do not charge the appliance for longer than the recommended time.

**WARNING:** if the charging light suddenly starts to flash rapidly, the appliance is faulty. If this happens, please stop charging and remove the adaptor from the outlet and contact our customer care center for further advice.

### Cordless Operation

- Insert the adaptor into the base of the appliance, plug into a suitable mains socket and switch off. The red LED light will flash when the adaptor is correctly inserted into the appliance and connected to the mains.
- Once the appliance is fully charged the red LED charging light will stop flashing but remain on, unplug the adaptor from the mains.

### Oiling Instructions

**IMPORTANT!** It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance.

For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.





To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

### **Preserving the batteries**

In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged every 6 months approximately. Then recharge the appliance to full capacity, again for 3 hours.

### **Comb Guides**

This appliance is supplied with 8 comb guides:

Cutting Length	Grade
3mm	#1
6mm	#2
9.5mm	#3
13mm	#4
16mm	#5
19mm	#6
22mm	#7
25mm	#8

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position.
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off.





## **Taper Control**

The taper control lever enables fine cut adjustment for precision clipping.

- To increase the cutting length, push the lever down.
- To reduce the cutting length, push the lever up.

## **Preparation for Use**

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged.

## **Clipping**

### **For an all over even cut:**

- Attach a comb guide as required – your clipper is supplied with 8 comb guides (grades 1, 2, 3, 4, 5, 6, 7 & 8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- You should achieve an even length cut all over your head.





### **For a shorter back and sides, with length on the top:**

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 comb guides (grades 1, 2, 3, 4, 5, 6, 7 & 8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

### **Outlining:**

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

### **Cleaning & Maintenance**

For easy cleaning, the blades on your BaByliss For Men clipper are removable. Regular cleaning will maintain their high performance level. To clean proceed as follows:

- Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.
- The clipper blade are removable for easy cleaning. To remove the blades, hold the clipper with the blades pointing upwards and push the underside of the blade teeth upwards to remove. Do not disassemble the blades.
- Using the cleaning brush, brush and blow away any remaining hair.







- To replace the blades, ensure the taper control lever is set at the lowest position by pushing the lever up and click the blades into position.
- To preserve your clipper's efficiency, we recommend cleaning the blades regularly. After cleaning, switch the appliance on and oil the blades using a few drops of the lubricating oil supplied. Only use the lubricating oil supplied with the appliance as this is specifically formulated for high speed clippers and does not evaporate or slow the blades.

**NOTE:** Do not attempt to repair or replace the blades. In the event that the blades become blunt or damaged, contact the Conair Customer Care Line (refer to UK «After Sales Service» section for further information).



### **SAFE DISPOSAL**

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.





## UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park,  
Fleet GU51 3TW

This BaByliss for Men appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange,

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

### Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist\*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs





because of product misuse.

*\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc*

*Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.*

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com)





## UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

IB-17/206

