

BaByliss[®]MEN



Japanese Steel Digital Hair Clipper

Model 7785U

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction book. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

IMPORTANT SAFETY

- Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to

understand the safe use and hazards involved and are adequately supervised.

- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

BaByliss[®]MEN

FEATURES

- Cord/ Cordless
- Powerful Lithium-ion battery
- 160 minute run time
- 3 hour charge
- Japanese steel cutting blades
- 8 Snap on comb guides , grades 1-8
- 45 different cutting lengths
- 5 position easy-twist taper control
- Digital LED screen displays remaining battery charge, locking function and selected cutting length
- Hard storage case
- 3 guarantee

INSTRUCTIONS FOR USE

Charging the Appliance

IMPORTANT! Only use the adaptor supplied with this appliance. This clipper is so easy to use, but before you do anything you must take your time to charge the unit for 3 hours before its first use. Even if you want to use it plugged in straight from the mains, this initial supercharge ensures optimum power performance to give smooth fast cutting every time. Maximum battery capacity will only be reached after 3 charging/ discharging cycles. A 3 hour charge will provide approximately 160 minutes use. A 30 minute quick charge will provide approximately 30 minutes use.

NOTE: Do not charge the appliance for longer than the recommended time.

Warning: If the LED display shows the words ‘Hi’ or ‘Low’, immediately check if the adaptor mentions the reference ‘CA78’. If the ‘Er’ symbol is displayed on the screen, stop charging immediately and contact our Customer Care Centre for further advice (see the ‘After Sales Service’ section of the information booklet).

Mains Operation

- Ensure the appliance is switched off.
- Connect the adaptor to the base of the appliance and plug the adaptor into a suitable mains socket.
- The appliance is now ready for use.
- **NOTE:** The appliance should not be used for longer than 20 minutes when operated from the mains.

Cordless Operation

- Insert the adaptor into the base of the appliance, plug into a suitable mains socket and switch on. The LED screen will then display the autonomy and the symbol ‘⌚’ will begin to flash, indicating that the unit is charging.
- Fully charged, the appliance can be used for at least 160 minutes.
- When LED display has less than 5 minutes left, the time symbol ‘⌚’ indication will change to red and flash, warning you there is approximately 5 minutes left of battery use remaining.

LOCKING AND UNLOCKING THE APPLIANCE

To lock the appliance, keep the switch pressed until the 3-second countdown is fully lit. The symbol will then flash, indicating that the appliance is locked.

To unlock the appliance, keep the switch pressed until the 3-second countdown is fully lit. The appliance is switched on and the LED screen displays the height of the tuning thumb wheel.

Oiling Instructions

IMPORTANT! It is highly recommended before each use to oil the blades with the oil provided. This ensures optimum cutting performance.

For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.

To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades. Switch off the unit and remove any excess oil by gently dabbing with a cloth.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged every 6 months approximately. Then recharge the appliance to full capacity, again for 3 hours.

Comb Guides

This appliance is supplied with 8 comb guides:

| Cutting Length | Grade |
|----------------|-------|
| 3mm | #1 |
| 6mm | #2 |
| 9.5mm | #3 |
| 13mm | #4 |
| 16mm | #5 |
| 19mm | #6 |
| 22mm | #7 |
| 25mm | #8 |

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position (see Fig.1).
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off.

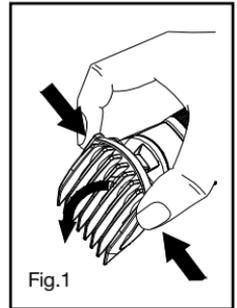


Fig.1

Taper Control

The easy-twist taper control enable fine cut adjustment for precision clipping. Ideal to create the perfect fade or blending two lengths.

Preparation for Use

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged or plugged into the mains.

Clipping

For an all over even cut:

- Attach a comb guide as required – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.

- You should achieve an even length cut all over your head.

For a shorter back and sides, with length on the top:

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

Outlining:

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

Cleaning & Maintenance

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide - the comb guides can be rinsed under running water. Please make sure they are dried thoroughly before storage or further use.
- Using the cleaning brush, brush and blow away any remaining hair from the blades.
- Do not disassemble the blades.



SAFE DISPOSAL

This appliance contains Li-ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service.

For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line – see “UK After Sales Service” section.

UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park,
Fleet GU51 3TW

This BaBylissMEN appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange,

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

**unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc*

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault

