

BaByliss[®]



CURL PODS

Model 3663U

BaByliss[®]

CURL PODS

The BaByliss Curl Pods have been uniquely designed to create long-lasting salon curls with a flawless finish. The all-in-one design eliminates the need for any clips or pins for easy, secure styling. The ultra-fast heat up ensures fast curl formation and long-lasting results. Easier to use than conventional rollers, simply wrap the hair around the barrel and snap the pod together for perfect, kink-free curls with a smooth finish.

FEATURES

- 18 large pods
- Ultra-fast heat up, ready to use in 3-5 minutes
- High heat performance
- On/off button
- Ready to use indicator
- 1.8m cord
- Storage pouch for pods
- Carry handle
- 3 year guarantee

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for future reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

WARNING! Do not use this appliance near bath tubs, showers, basins or other vessels containing water.

- Do not use the appliance in the bathroom.
- Do not immerse the appliance into water or other liquids.
- The inside of the pod will be hot. Hold the pods by the cool tip to roll the hair. Do not touch the heating posts that hold the pods.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears,



eyes, face and neck.

- Never drop or insert any object into any opening.
- Always unplug the appliance when not in use or before cleaning.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place on any heat sensitive surface and always allow the appliance to cool down before storing away.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).



INSTRUCTIONS FOR USE

- Place the unit on a level, heatproof surface. Do not open the translucent cover at this time.
- Turn the unit on by pressing the 0/I button to the 'I' position.
- The 'ready to use' indicator is positioned on the front of the unit which starts off red, but as the unit heats the pods, the indicator will subtly turn from red to white. This normally takes from 3-5 minutes. Once the 'ready to use' indicator has changed colour, the pods are ready to use.
N.B. The 'ready to use' indicator is a small silicone dot which subtly changes colour as the unit heats up, it will not illuminate when the unit is turned on.
- Ensure the hair is dry and combed through to remove any tangles.
- Slide the translucent cover around the unit so the opening is over the pods.
- Remove one of the pods by holding the cool tip and pull out of the unit, begin to style the hair by following the steps below.



- Step 1. Take a section of hair around 2 inches wide. For thicker hair, use smaller sections. Start by winding the ends of the hair around the barrel and then towards the top of the head. For a modern style, only wind the pod up to eye level so the curls start lower down. For a more voluminous style, wind the pod right to the root.



- Step 2. Once the pod is in the desired position, push the cool tip and base together to close the pod. The pod should close easily. If the pod is difficult to close, use a smaller hair section.



- Step 3. Place the pods around the hair on top of the head first and then work down towards the nape of the neck. Continue around the head until all pods are in place. Allow the pods to cool completely to set the curl and give long-lasting results.



- Step 4. Once the pods have cooled down, open the pod by pulling on the base and cool tip and gently unwind. Slowly unroll the pod from the hair, being careful not to pull the hair as you unwind. Once the hair is loose from the pod, style as desired.

- Ensure when placing the rollers back in to the unit the pod is completely open to heat up correctly. When heating the additional rollers allow between 3-5 minutes for the unit to heat the pod fully.

- Once you have finished styling, turn off the unit by pressing the '0/1' button to the "0" position and allow the unit to cool down.
- The pods can be placed back in the unit or in the storage pouch provided.
- Before storing away, slide the translucent cover around so the opening is at the side of the unit.
- Unplug the unit and allow it to cool completely, then loosely wrap the cord around the base of unit for storage. Place in a safe, dry location, out of the reach of children.

IMPORTANT!

- The BaByliss Curl Pods have been specifically designed to reach very high temperatures in order to produce fast and perfect curl formation.
- When applying the pods to long or thick hair, the pods can be used instantly once the heat ready dot has turned white.
- When applying the pods to short or fine hair, allow the pods to heat up until the 'ready to use' indicator turns white. Once the 'ready to use' indicator has turned white, turn off the unit and slide the cover so the opening is over the pods. Allow the pods to cool until they feel comfortable when applying into the hair. Failure to do so may lead to discomfort.
- Always take extra care to avoid the pods coming into direct contact with the scalp.

HELPFUL HINTS AND TIPS

- The tightness and hold of the curl is determined by the length of time the curl pod is left in the hair. After using the appliance several times, the length of time the pod should be left in the hair to achieve the desired style will be established.
- For a modern style, only wind the pod up to eye level so the curls start lower down. For a more voluminous style, wind the pod right to the root.
- For long-lasting, defined curls, the pods should be left in the hair for a longer period of time before removing or until the pods have completely cooled.
- For softer, glamorous waves the pods should be left in the hair for a shorter period of time.
- In all cases we suggest to leave the pods in the hair for at least 10 minutes.

WARNING!

- Do not slide the cover around so the opening is over the pods until the 'ready to use' indicator has turned white.
- Take care to avoid contact between the hot pods and the face, neck, eyes or ears.
- Please do not touch the hot metal parts of the unit during use.

POD HEATING FOR BEST RESULTS

IMPORTANT! When placing the pods back into the heating unit always ensure they are fully opened. Holding the pod by the cool tip, slide on to the heating post. Be careful not to let the pod close as it is inserted onto the unit, if the pod is not fully opened and is placed over the heating post incorrectly this can prevent the pod from reaching the required temperature and may affect performance.

STORAGE POUCH

- The inside lining of the pouch is heat resistant, allowing the pods to be stored away immediately after use.

IMPORTANT! Do not place the pods onto the outside of the pouch when it is still hot, as the outside material is not heat resistant.

CLEANING & MAINTENANCE

- To clean the pods, use a damp cloth with some mild detergent and wipe over the pods to remove any residue.
- Towel dry and leave rollers for 1 to 2 hours before using again to ensure they are completely dry before use.

General

- Always unplug the unit when not in use or before cleaning.
- Always store the unit with the cover closed to protect it from dust.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

YELLOW & GREEN = EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- The wire which is coloured YELLOW & GREEN must be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 3A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 3A fuse must be fitted.

