

Boutique

SALON CONTROL 235



created by **BaByliss**

INTRODUCING BOUTIQUE

A luxurious collection created by BaByliss; Boutique is a professional range of tools combining high-fashion styling with true salon performance and exceptional quality, for long-lasting results with a flawless finish.



IMPORTANT SAFETY CAUTIONS

This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- ALWAYS keep out of reach of children (during and after use and whilst cooling).

- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not use the appliance in the bathroom.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of



- damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
 - Do not leave the appliance unattended when switched on or plugged in.
 - During use do not place the appliance on any heat sensitive surface, even when using the heat wrap provided.
 - Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
 - In the event the appliance is left switched on, it will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, simply press the '1/0' button to turn the power on.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat wrap provided and continue to keep out of the reach of children as it will remain hot for several minutes. Allow the appliance to fully cool before storing away.
- Only use the heat wrap as described within the Safety Cautions.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

GETTING TO KNOW YOUR BOUTIQUE STRAIGHTENER

Professional 235°C

- ✓ **235°C** top temperature
- ✓ Advanced heating system with superior heat transfer for **super-fast** results
- ✓ **Maintained high heat** for every hair section to give **long-lasting smoothness**

Precise Heat Control

- ✓ Digital heat control for perfect styling of **all hair types**
- ✓ Memory function stores preferred heat setting for **easy consistent** styling


Tourmaline-Ceramic Plates

- ✓ Special Smooth Glide™ tourmaline-ceramic plates for effortless **snag-free** styling

Universal Voltage

- ✓ For **true salon performance** anywhere around the world

OPERATING FEATURES

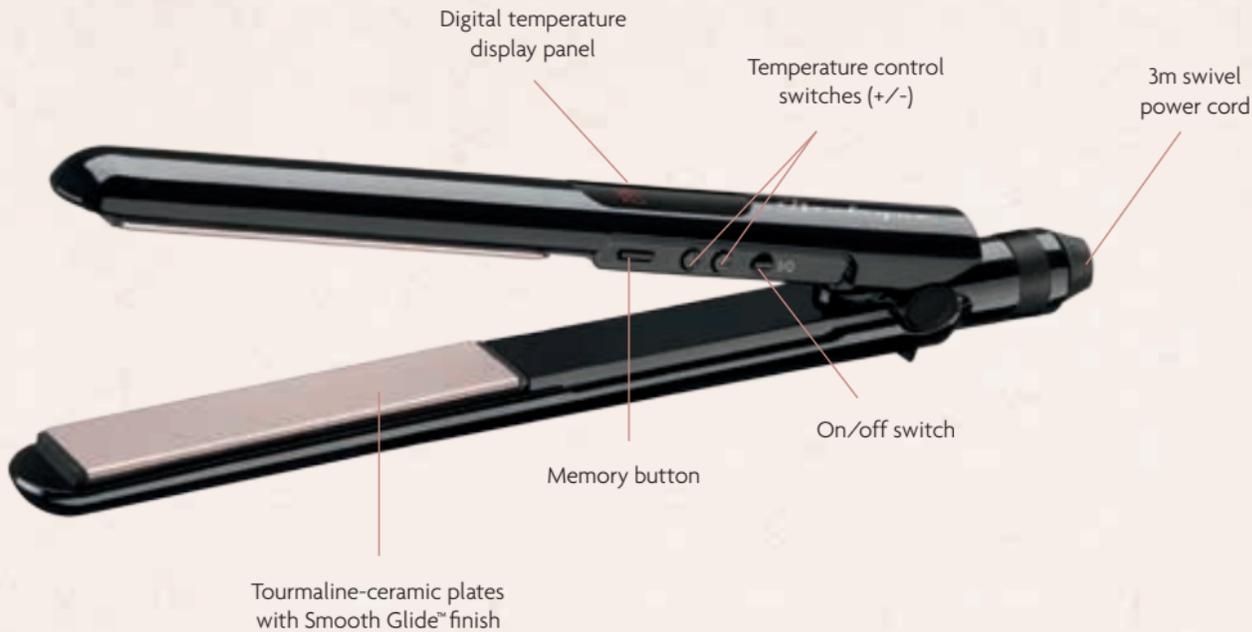

FINDING THE CORRECT HEAT SETTING FOR YOUR HAIR TYPE

There are 12 temperature settings to select from (180°C-235°C) for enhanced hair protection on all hair types. Use the guide below to find the correct temperature for your hair category. We recommend you always start with a lower temperature and increase gradually if required.

Hair Type Description	Very Fine, Fragile Hair	Regularly Coloured or Highlighted Hair	Fine, Easy to Curl Hair	Normal Textured Hair	Naturally Curly or Wavy Hair	Thick or Coarse Hair
Recommended Temperature Setting	180°C	185°C	190°C	195°C	200°C	210-235°C

IMPORTANT! This styler is designed to reach very high temperatures. If the maximum setting is too hot for the hair type then select a lower temperature setting.

HOW TO USE YOUR BOUTIQUE STRAIGHTENER

CAUTION! Do not place the styler directly onto any heat sensitive surface whilst in operation. Use the heat wrap provided to protect the work surface whilst styling your hair.

- Ensure hair is dry and combed through.
- Press the 'I/O' button to switch the styler on.
- The styler will automatically heat up to 180°C, once it's reached this temperature the digital display will stop flashing.
- Use the temperature buttons (+/-) to select the preferred temperature. The temperature increases in 5°C increments for specific temperature control (180°C-235°C).
- Once the preferred temperature has been selected the digital display will flash 3 times and start heating up. Once the chosen temperature has been reached the styler is ready for use.
- After use, press the 'I/O' button to switch off and unplug the styler. Immediately wrap in the salon heat wrap provided and allow to cool.
- Allow the styler to cool down fully before storing away.

MEMORY FUNCTION

The memory feature allows you to select your preferred temperature setting and store it for consistent results during each use.

- To programme your preferred temperature, ensure the styler is switched on. Select the temperature you require by using the temperature buttons (+/-) and by viewing the digital display.
 - Once the preferred temperature is displayed on the digital display, hold down the memory button (M) for 3 seconds. The temperature on the digital display will flash 3 times to confirm the temperature has been stored.
 - The memory function will store the selected temperature setting for future use.
 - When switching the styler back on for the next use, simply press the memory button (M) and your stored temperature will be automatically selected.
- NOTE:** To reset the stored temperature at any time, simply select a different temperature and hold down the memory button for 3 seconds, wait for it to flash 3 times and the new temperature will be stored.

STRAIGHTENING

- Ensure hair is dry and combed through.
- Divide hair into thin sections that are no wider than the plates.
- Starting at the root, close the plates applying gentle pressure and glide down the section in one smooth movement.
- If you wish to create shape at the ends of the hair, slightly bend your wrist inwards or outwards as you reach the end of each section.
- Repeat as necessary through the remaining sections of hair.
- Use the heat protection wrap to rest your styler on between each section to protect surfaces.
- Allow the hair to cool fully before combing through.

CREATING CURLS

- Separate a section of hair. The smaller the section the more defined the curl. The larger the section the looser the curl or wave.
- Take the hair section and place between the plates, roughly 3 inches from the roots. (See Fig. 1).
- Turn the styler 180° back on itself so that the hair is wrapped once around the outside of the styler. (See Fig. 2).
- Slowly glide the styler along the length of hair from root to tip in a downward motion. (See Fig. 3).
- Release the styler from the hair.
- To ensure the curl sits neatly in place, hold the end of the section you have curled and twist it in the direction of the curl. (See Fig. 4).

Fig.1



Fig.2



Fig.3

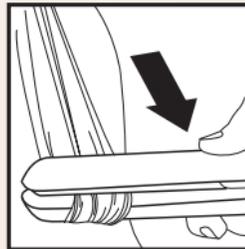


Fig.4



AUTO SHUT-OFF

This appliance has an automatic shut off feature for added safety. If the styler is switched on for more than 72 minutes continuously, then it will automatically switch off. If you wish to continue using the styler after this time, simply press the 'I/O' button to turn the power on.

SALON HEAT WRAP

The straightener comes with a salon heat wrap for use during and after styling. During use do not place the styler on any heat sensitive surface, even when using the heat wrap provided. After use, switch off and unplug the styler. Immediately wrap the styler in the heat wrap provided and allow to fully cool down. Continue to keep it out of the reach of children as it will remain hot for several minutes.

IMPORTANT: The outer satin material of the heat wrap is not heat resistant and the appliance should not be placed on this material whilst hot.

UK GUARANTEE

This BaByliss styler is guaranteed for consumer use for 5 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the styler does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 5A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 5A fuse must be fitted.

Boutique

created by **BaByliss**