

BaByliss[®]



BRILLIANT SHINE

Model HB51U

BaByliss[®]

BRILLIANT SHINE

The Brilliant Shine ionic cushion brush releases conditioning ions directly onto the hair with the active frizz-control ionic generator which removes static and smooths the hairs cuticle for noticeably softer hair that looks and feels, shiny and manageable.

FEATURES

- Double sided active frizz-control ionic generator, releases ions to smooth the hair cuticle
- Ball tipped bristles and flexible cushion base for optimal comfort
- On indicator light
- On/off switch
- 2 x AAA batteries included
- 2 year guarantee

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair can increase these levels, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. High levels of static charge can also cause hair to become “fly-away” and difficult to style.

The active frizz-control ionic generator in the Brilliant Shine brush produces a stream of negative ions which act to neutralise the static charge, smoothing the cuticle for shiny, smooth and manageable hair.

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

- **WARNING!** Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.
- **ALWAYS** keep out of reach of children (during and after use).
- This appliance should not be used, cleaned or maintained by children.

IMPORTANT SAFETY

WARNING! Do not use this appliance near, bathtubs, showers, basins or other vessels containing water.



- Do not immerse the appliance in water or other liquids.

WARNING! Only use new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

- Do not use any other attachments with this appliance other than those supplied with it.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair

Customer Care Line (refer to “UK After Sales Service” section for further information). No repair should be attempted by the consumer.

- Do not leave the appliance unattended when switched on.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Electrical Safety of Domestic Appliances).

INSTRUCTIONS FOR USE

The BaByliss Brilliant Shine cushion brush operates on two 1.5V AAA type batteries (included). To insert the batteries follow the instructions below:

- Twist the battery compartment cover to the unlocked position then slide the battery cover off the brush.
- Insert the first battery negative end first, followed by the second battery, negative end first, so the positive end is against the battery compartment cover once replaced.
- Replace the battery compartment cover back over the end of the brush and twist it back into place to the locked position.
- Slide the on/off switch up to turn on the ionic function. The indicator light will illuminate to show you the ionic function is working.
- After each use switch the brush off.

Please note: Turning on the brush will automatically activate the ionic technology. Any noise generated from the ionic generator is normal.

 
WARNING! If the appliance remains unused for a while or if the batteries have run down, remove them from the unit. These precautions will extend the life of the product.

WARNING! Do not touch the multi-fibre negative ion dispenser.

CLEANING & MAINTENANCE

To make cleaning easier the head of the ionic brush can be removed. We recommend cleaning your brush regularly to prevent hair and styling products from building up.

- Whilst holding the head of the handle firmly in one hand and the handle in the other, pull the two sections apart.
- Use a comb to remove hair from your brush, then clean the head of your brush in warm, slightly soapy water.
- Dry the brush head thoroughly before placing the head and handle back together.



WARNING! Do not immerse the handle of the brush in water or other liquids.

REPLACING THE BATTERIES

To replace the batteries once they begin to run down:

- Twist the battery compartment cover to the unlocked position then slide the battery cover off the brush.
- Remove the two old batteries. Replace with two new batteries of the same kind. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Replace the battery compartment cover back over the end of the brush and twist it back into place to the locked position.

Please Note: When the batteries have run down, they should be disposed of at a recycling centre to safeguard the environment. If the batteries leak, avoid touching them and dispose of them at a recycling centre.

WARNING! Only use new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



BATTERY DISPOSAL

This appliance contains non-rechargeable, user replaceable batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre.

For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line (refer to “UK After Sales Service” section for further information).

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 2 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

The return address is:

Customer Care Centre
Conair Logistics
Unit 4 Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

