

BaByliss[®] MEN



THE CREWCUT

Model 7758U

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction book. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

IMPORTANT SAFETY

-  Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.

- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow the appliance to cool before storing away.
- This product contains batteries (Lithium-ion battery) that are not to be removed from the appliance for charging.
- The batteries in this appliance are non-replaceable by the end user. Only an authorised engineer should perform this task for safety reasons.
- The supply terminals are not to be short circuited.
- For indoor, household, domestic use only.
- For the purposes of recharging the battery, only use the detachable charging supply unit provided with this appliance.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 credited company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to «UK After Sales Service» section).
- The battery should be removed for safe disposal at the end of its life.
- When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.

BaByliss® MEN

FEATURES

- Twin blade cutting system for multi-directional self-hair cutting
- Lithium ion technology for optimum performance and long lasting power
- 4 cutting comb guides; grades 1, 2, 3, 4
- Ear taper guide
- Cleaning Brush
- Oil
- Storage pouch

INSTRUCTIONS FOR USE

Charging Instructions

IMPORTANT! The Crewcut is very easy to use, however it is essential that you fully charge the unit for 3 hours before its first use. This initial supercharge ensures optimum power performance to give smooth fast cutting every time. Maximum battery capacity will only be reached after 3 charging/discharging cycles. A full charge will provide approximately 75 minutes use. A 30 minute quick charge will provide approximately 15 minutes use.

- Before using for the first time, the appliance should be fully charged continuously for 3 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Ensure the appliance is switched off.
- Insert the small plug on the charging adaptor into the socket on the back of the appliance.
- Plug the charging unit into a suitable mains socket.
- The red charging indicator light on the power handle will flash when the appliance is correctly connected to the mains. When it is fully charged, indicator light will remain on.
- A full charge will supply enough power for approximately 75 minutes of cordless use.
- A quick charge of 30 minutes will give 15 minutes use.
- When the appliance is about to run out of energy, the charging indicator will flash to indicate that there is less than 15% battery capacity remaining.

WARNING! If the charging light suddenly starts to flash rapidly, the appliance is faulty. If this does happen, please stop charging and remove the adapter from the power source and contact our Customer Care Centre for further advice.

Preserving the Batteries

- In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be fully discharged and then recharged for 3 hours every 6 month approximately.

Comb Guides

This appliance is supplied with 4 comb guides:

Cutting Length	Grade
0.5mm	#0
3mm	#1
6mm	#2
9.5mm	#3
13mm	#4

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the blades and slide the sides into the slots either side of the blades until it clicks (Fig. 1).

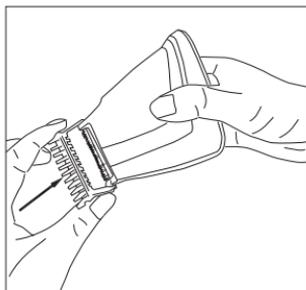


Fig. 1

- To remove the comb guide, place your fingers each side of the of the comb guide and gently pull down and away from the unit (Fig. 2).

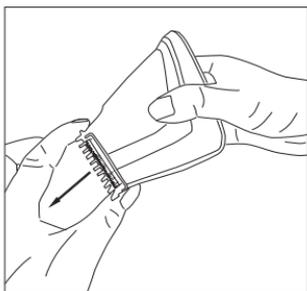


Fig. 2

The appliance is also supplied with an ear taper guide. This can be used above the ear to get a clean line.

Preparation for Use

- Always inspect the appliance for noticeable signs of damage. Do not use if damaged.
 - Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
 - Ensure the appliance is well oiled.
 - Ensure the appliance is sufficiently charged.
 - For best performance, use on clean, dry hair that has been combed until tangle-free.
 - Prior to use always inspect the head for warts, moles, spots and broken skin. Special care should be taken to avoid injury and cuts.
 - Remove any head jewellery such as earrings and necklaces before use.
- Please Note:** The appliance should not be used for longer than 20 minutes when operated from the mains.

WARNING! The clipper is for use only on the head. Never use the clipper on the face or any other area of the body.

Clipping

- Attach the comb guide length of your choice. Grade 1 = 3mm, Grade 2 =

6mm, Grade 3 = 9.5mm, Grade 4 = 13 mm.

- Switch on the clipper using the on/off sliding switch located on top of the clipper. The blades will start to move and the green LED will illuminate.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards and the comb guide flat on the head. Slowly move the clipper upwards, through the hair, and towards the front of the head in a forward sweeping motion. Once at the front of the head, engage the opposite blade in a backward sweeping motion to move from the front of the head, back to the nape of the neck.
- Continue with this sweeping motion, running from the nape of the neck to the front of the head until you reach an even length all over.
- To tidy longer hairs around the ears and neckline, simply remove the comb guide and use the blade for neatening edges and shaping sideburns.
- Only apply gentle pressure. Never force the clipper– if resistance is experienced lift clipper away from the head, empty hair from the clipper and resume clipping.
- If using on areas where there are folds of skin, ensure the skin is stretched taught prior to cutting hair in this area.
- If you experience any discomfort stop using immediately.
- If you require a grade 0 cut, the clipper can be used without a comb guide attached.

Please Note: When you first begin cutting your hair, you may notice that some hair is being cut, while others are left long. This is perfectly normal, especially if cutting slightly longer hair because hair grows in many different directions. Continue cutting in a back and forth sweeping motion until all the hair is cut to an even length.

Removing the blades

- The blades can be removed to aid cleaning.
- To remove the blades, hold the handle by two hands, place your two thumbs underneath the blades and push the blades away from the handle (Fig. 1).
- Gently blow away any hair trapped beneath the blades.
- The blades can be rinsed under the tap. After rinsing, the blades may need to be oiled. See oiling instructions below.
- Be sure the blades are dry before reattaching to the clipper body.

- To reattach the blades, put the position rib of the blades into the slot on clipper body (Fig. 2). Then hold the handle by two hands, and press downward by two thumbs (FIG. 3). there is ticktack when attaching the blades.

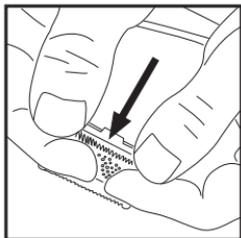


Fig I

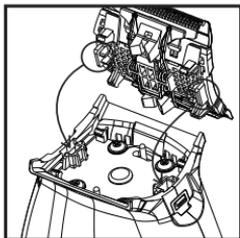


Fig II

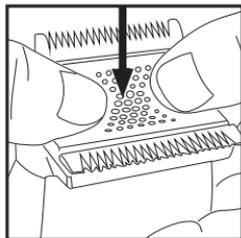


Fig III

CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

- Remove the comb guide after use. Rinse the comb guide under running water and dry thoroughly before storage or use.
- Never place the clipper under running water.
- After each use ensure hair is emptied from the blade area and use the cleaning brush to clean thoroughly.
- It is highly recommended to apply a small amount of oil (provided) to the blades before each use.
- Wipe the outside with a damp cloth and dry thoroughly before use or storage.



BATTERY DISPOSAL

This appliance contains Li-ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service.

For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line – see “UK After Sales Service” section.

UK GUARANTEE

The Conair Group Ltd, Unit 3, Waterfront Business Park,
Fleet GU51 3TW

This BaBylissMEN appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange,

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

**unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc*

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

